



## HARD GROUND TENT PEGS 20PK


- Ideal for hard ground
- Tools required (not included):  
Mallet

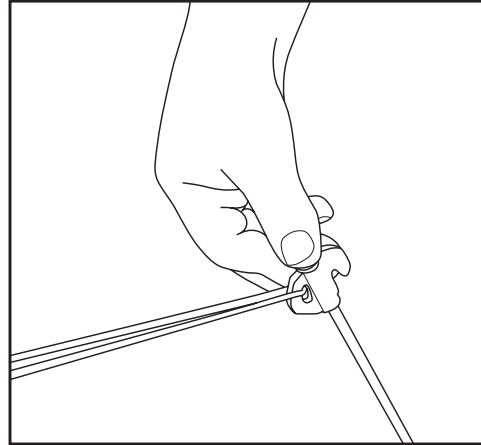


1. Loop guy rope through the hole in tent peg as shown above and secure.

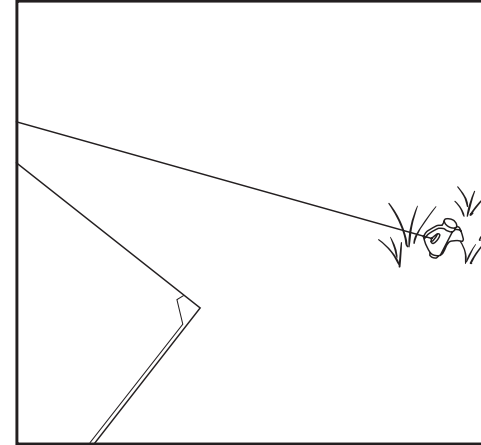


2. Extend guy rope and tent peg out as much as required.

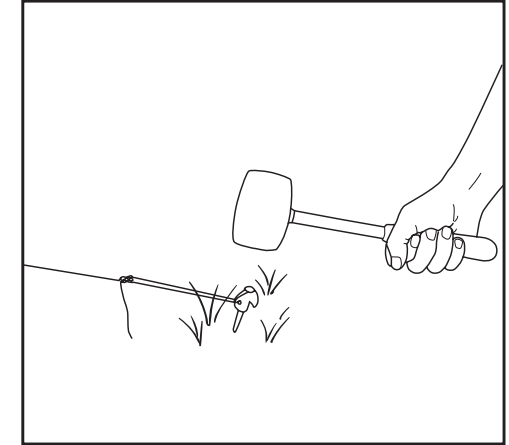


3. Insert tent peg into ground at an angle. Use a mallet (not included) to push the tent peg into the ground.

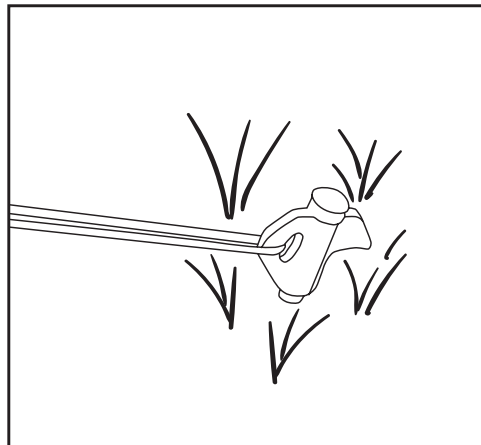

4. Adjust guy ropes and tension to the desired strength.

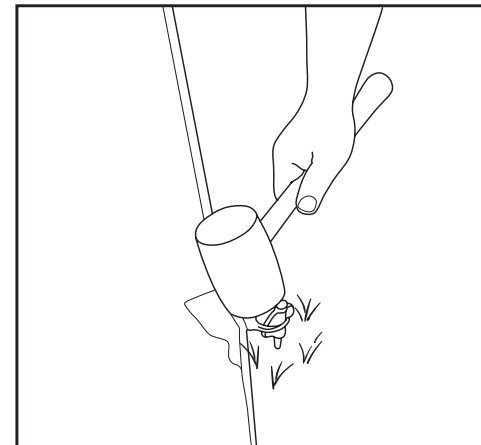


5. Repeat the process for any other tent pegs used.

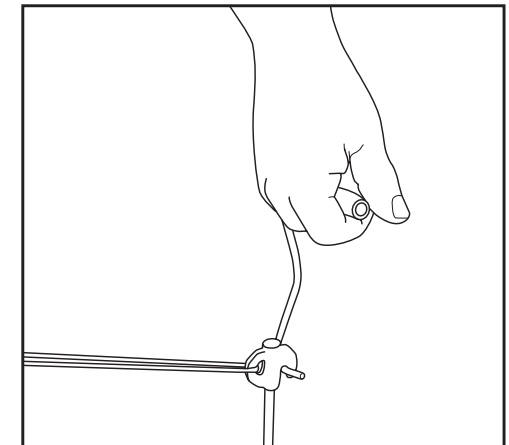



After use, pull out tent pegs using the tent peg puller supplied. Hook tent peg puller under plastic stopper.

## PILE DRIVER TENT PEGS 15PK


- Ideal for medium to hard ground
- Tools required (not included):  
Drill or spanner

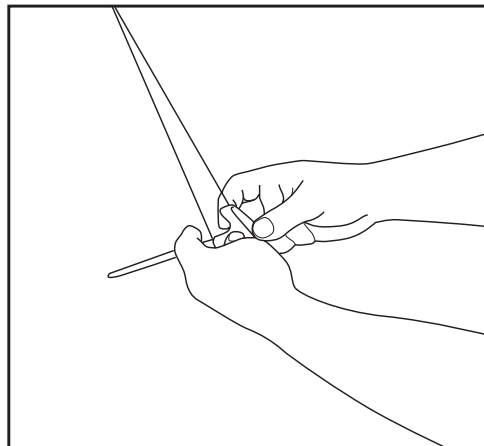


1. Tie a loop in the guy rope and slip the tent peg into this OR loop the guy rope around the tent peg.

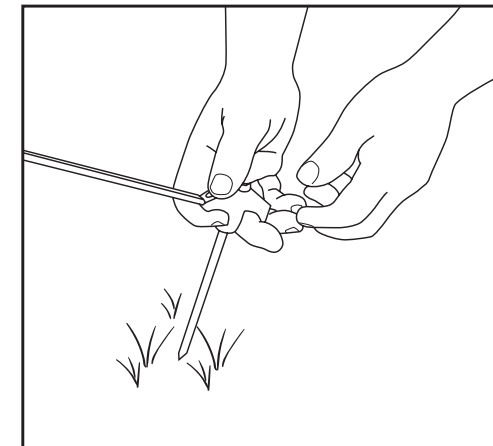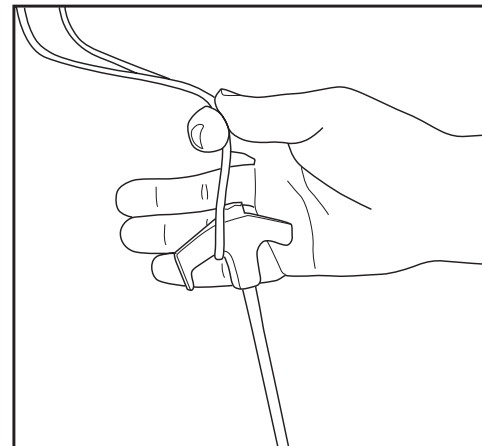

2. At the desired position, push the tent peg into the ground at an angle AWAY from the tent.

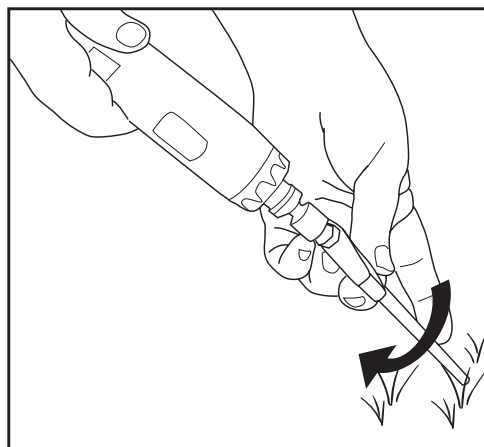

3. The tent peg can be inserted into the ground using a spanner (not included) or by using a drill with the 13mm Hex head adapter provided.

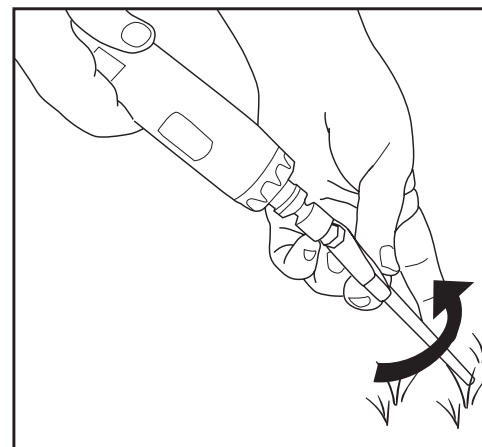

4. To remove the tent pegs after use, use a drill with the 13mm Hex head adapter provided, and set the drill to reverse.