



User Manual







POP-UP FOOTBALL GOALS




Contents

Overview	3
Use	4
Package contents/parts	5
General information	6
Reading and storing the user manual	6
Explanation of symbols	6
Safety	6
Proper use	6
Safety instructions	7
Checking the football goal and package contents	8
Assembly and set up	9
Taking down and folding up the football goal	10
Cleaning	10
Storage	10
Technical data	11
Disposal	11
Disposal of the packaging	11
Disposal of the football goal	11


A


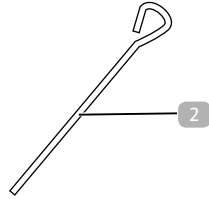
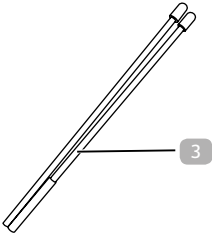
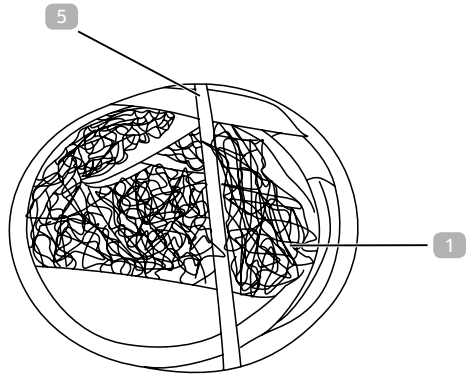
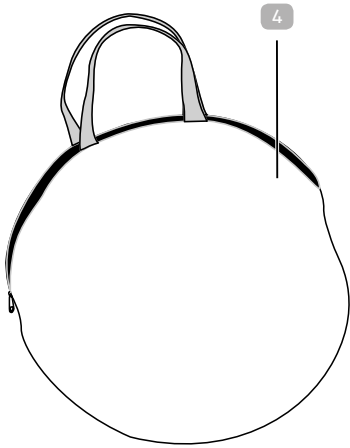


B

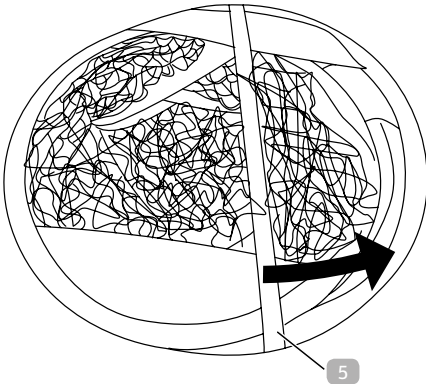

C

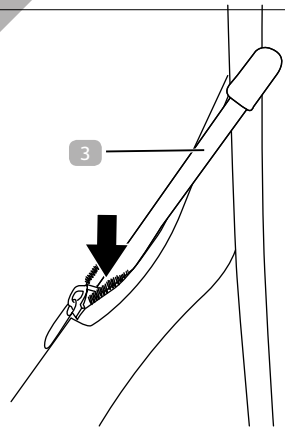

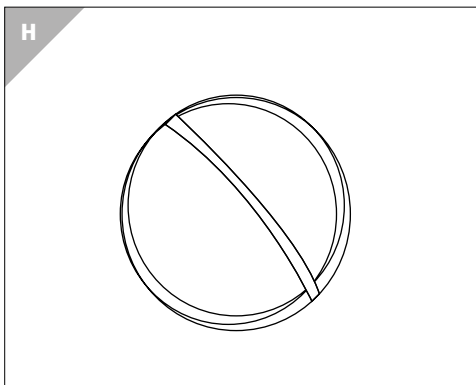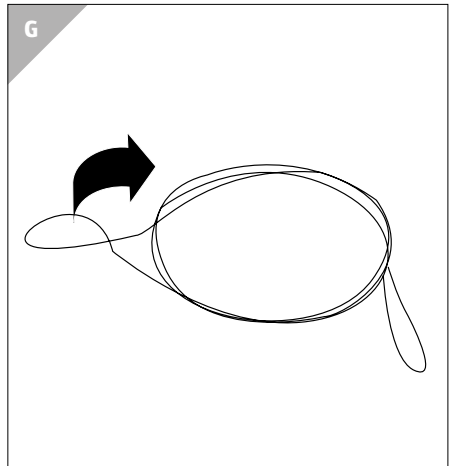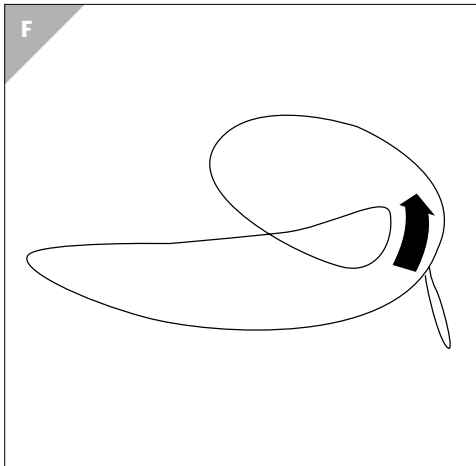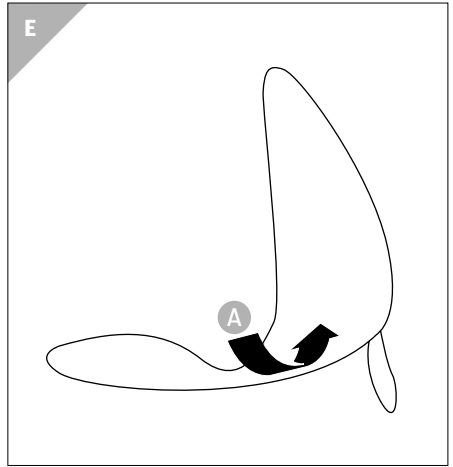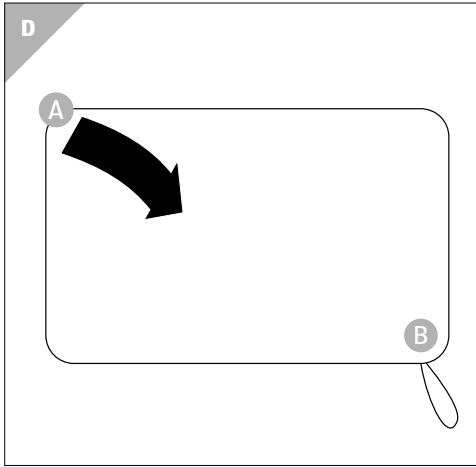

Package contents/parts

- 1 Football goal, ×2
- 2 Peg, ×8
- 3 Plastic pole, ×4
- 4 Transport bag
- 5 Tie strap

General information

Reading and storing the user manual



This user manual accompanies these pop-up football goals (hereinafter referred to only as “football goal”). It contains important information on set-up and handling.

Read the user manual carefully before using the football goal.

This particularly applies to the safety instructions. Failure to heed this user manual may result in severe injury, or damage to the football goal.

Store the user manual for future use. If you pass the football goal on to third parties, be absolutely sure to include this user manual.

Explanation of symbols

The following symbols and signal words are used in this user manual, on the football goal or on the packaging.



This signal symbol/word designates a hazard with moderate degree of risk which may lead to death or severe injury if not avoided.



This signal word warns against potential damages to property.



Declaration of conformity (Chapter "Declaration of Conformity"): Products marked with this symbol comply with all applicable Community Regulations of the European Economic Area.



WARNING!
Not suitable for children under three years of age.

Safety

Proper use

The football goal is only designed for playing football at home outdoors. It is intended for private use only and is not suitable for commercial purposes.

Only use the football goal as described in this user manual. Any other use is deemed improper and may result in damage to property or even personal injury.

The manufacturer or vendor accepts no liability for damage caused by improper or incorrect use.

Safety instructions



WARNING!

Not suitable for children under three years of age. Danger of suffocation due to small parts and packaging materials that can be swallowed!

Children can become trapped in the packaging material or swallow small parts when playing and suffocate or choke.

- Keep the packaging material and small parts away from children.



WARNING!

Not suitable for children under three years of age. The cords and nets pose a risk of strangulation!

When playing, children could catch themselves in the cords or net and be strangled.

- Keep children away from the cords and nets.



WARNING!

Risk of injury!

Tipping over the football goal could result in injury.

- Do not allow children to use the goal frame and the net as a climbing frame. There is a risk of injury if the football goal tips over or the child falls over. Therefore, children have to be supervised during play.
- Always set up the football goal on a flat surface and anchor it firmly to the ground with the provided pegs. The football goal must not be used if it is not firmly secured against tipping over.

- Secure the football goal against tipping over when not in use.
- Do not use the football goal near swimming pools or bodies of water. If the football goal falls in water, you could be caught in it and drown.
- Stop using the football goal if the plastic or metal parts of the football goal exhibit cracks or breaks or are deformed. Therefore, inspect all parts for damage before each use. Only replace damaged parts with corresponding original spare parts.
- Keep children away when setting the football goal up and taking it down. The football goal may only be set up and taken down by adults.
- The football goal is under tension when folded up. Secure the football goal with one hand when opening it. There is a risk of injury if the football goal suddenly unfolds.

NOTICE

Risk of damage!

An unsuitable location can result in damage to property while playing football.

- Keep a minimum distance of 3 meters from other objects (such as electrical cables, plant pots, etc.).

Checking the football goal and package contents

NOTICE

Risk of damage!

If you are not cautious when opening the packaging with a sharp knife or other pointed object, you may damage the football goal.

- Be very careful when opening it.

1. Take the football goal out of the packaging.
2. Check to make sure that all parts are included (see **Fig. A**).
3. Check whether the football goal or the individual parts exhibit damage. If this is the case, do not use the football goal. Contact the manufacturer at the service address specified on the warranty card.

Assembly and set up



Risk of injury!

Tipping over the football goal could result in injury.

- Always set up the football goal on a flat surface and anchor it firmly to the ground with the provided pegs. The football goal must not be used if it is not firmly secured against tipping over.
- Before using pegs, make sure that the ground is suitable (e.g. there must not be any water pipes for garden sprinklers).
- Do not use the pegs on the beach. The pegs could easily come loose if the sand is not firm.



Risk of injury!

Incorrect assembly may result in injury.

- Carefully assemble the football goal on a suitable, flat surface.
- Secure the football goal with one hand when opening it. There is a risk of injury if the football goal suddenly unfolds.

1. Take the football goal **1** out of the carry bag **4**.
2. Loosen the tie strap **5** and carefully unfold the football goal (see **Fig. B**).
3. Connect the plastic poles **3** with one another.
4. Undo the zippers and push a plastic pole into each opening (see **Fig. C**).
5. Close the zippers to prevent the plastic poles from coming loose.
6. Secure the football goal in the ground with the enclosed pegs **2**.

7. Should securing the goal with pegs not be possible due to the ground conditions, use other appropriate means (such as sand bags) to prevent the football goal from tipping over.

Taking down and folding up the football goal

1. Pull the pegs **2** out of the ground.
2. Undo the zippers and remove the plastic poles **3**.
3. Fold the football goal **1** up and hold it parallel to your chest.
4. Push corner **A** forward and then down towards corner **B** (see **Fig. D** and **E**).
5. Three loops will form automatically.
6. Twist the corners **A** and **B** together until the loops fold into one another and collapse (see **Fig. F** and **G**).
7. Secure the three rings that have now been created with the tie strap **5** (see **Fig. H**).
8. Put the football goal, the plastic poles and the pegs in the transport bag **4**.

Cleaning

NOTICE

Risk of damage!

Improper handling of the football goal may result in damage.

- Do not use any aggressive cleaners, brushes with metal or nylon bristles or sharp or metallic cleaning utensils such as knives, hard scrapers, etc. They could damage the surfaces.

1. Clean the football goal **1** with a damp cloth.
2. Let all parts dry completely.

Storage

- Make sure that all parts are stored in a dry and weather-proof location. Use the transport bag **4** for this purpose.

Technical data

Model:	FLX-PUG-04
Article number:	800241
Dimensions (W × H × D):	120 × 80 × 80 cm
Material:	100 % polyester

As our products undergo continual development and improvement, technical changes and changes to the product design are possible.

This user manual can also be downloaded as a PDF file from our homepage www.flextrade.de.

Disposal

Disposal of the packaging



Dispose of the packaging sorted by type. Dispose of cardboard and other related substances in the waste paper collection, and foils in the recyclable waste collection.

Disposal of the football goal

- Should the football goal no longer be capable of being used at some point in time, dispose of it in accordance with the regulations in your city or state.
- Please ensure your recycling information applies to the local regulations and EPA recommendations (www.epa.gov).



Great care has gone into the manufacture of this product and it should therefore provide you with years of good service when used properly. In the event of product failure within its intended use over the course of the first 3 years after date of purchase, we will remedy the problem as quickly as possible once it has been brought to our attention. In the unlikely event of such an occurrence, or if you require any information about the product, please contact us via our helpline support services, details of which are to be found both in this manual and on the product itself.



PRODUCED IN CHINA FOR:

ALDI STORES LTD. PO BOX 26, ATHERSTONE
WARWICKSHIRE, CV9 2SH.

ALDI STORES (IRELAND) LTD.
PO BOX 726, NAAS, CO. KILDARE.
Visit us at www.aldi.com

AFTER SALES SUPPORT

800241



00800 7874 7874 (free / cell phone different)



flextrade-gb@teknihall.com
flextrade-ie@teknihall.com

MODEL:
FLX-PUG-04

07/2020

3

**YEAR
WARRANTY**